


Your Aircell Axxess® Wi-Fi handset operates much like corded Aircell Axxess handsets, with a few distinct differences. Take a moment to familiarize yourself with the information in this supplement to the Aircell Axxess II Users Manual that came with your system.


### Function Keys (replaces information found on page 4)

The Wi-Fi handset function key menu and the steps for accessing functions are different from the corded handset. The following menu and steps will apply when using your Wi-Fi handset.



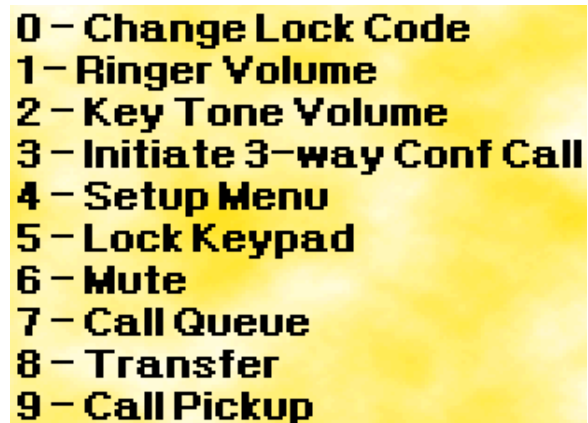


**0 – Change Lock Code**  
**1 – Ringer Volume**  
**2 – Key Tone Volume**  
**3 – Initiate 3-way Conf Call**  
**4 – Setup Menu**  
**5 – Lock Keypad**  
**6 – Mute**  
**7 – Call Queue**  
**8 – Transfer**  
**9 – Call Pickup**

To select a function:


- Press the  key
- Press the number key corresponding to your desired function


### One-Touch Speed Dialing (replaces information found on page 13)

Your Wi-Fi handset has two speed dialing keys:  and . Instructions for saving numbers in these two locations are contained in your *Aircell Axxess II Users Manual*. To call a stored number, simply press the desired speed dialing key. You do not need to first press .

### Storing Numbers in Your Wi-Fi Handset Personal Phone Book (replaces information found on page 14)

Follow steps 1 through 3 on page 11 of your *Aircell Axxess II User Manual*. When you have selected the location for the stored number, you will see the following screen:

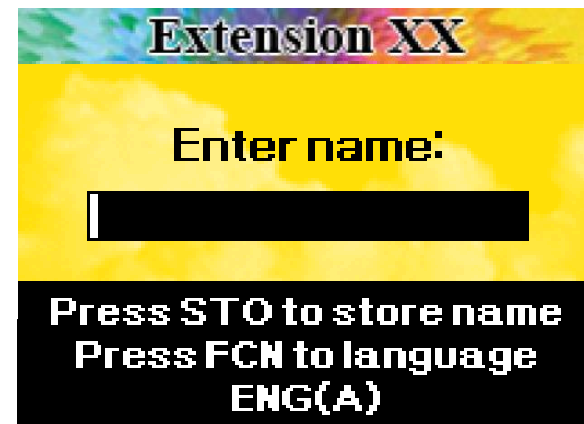

- Press the  key to toggle between capital letters, small letters, numbers and symbols

Resetting Your Handset (replaces information found on page 19)

To reset your handset:

- Press and hold 

Please refer to your *Aircell Axxess II User Manual* for additional information.



Aircell Axxess<sup>®</sup> Wi-Fi Handset  
Supplemental User Guide